

## WHITE PAPER

# RESIDUAL LIFETIME ASSESSMENT OF PE PIPELINES

Dr. Predrag Micic  
(Product Development Executive)  
August 2016



—  
How can a pipeline owner determine the remaining life of a pipe that has been in service for many years?  
—

.....  
**Polyethylene pipes are tough, durable and have a design life of up to 100 years. How can a pipeline owner determine the remaining life of a pipe that has been in service for many years? An assessment of the current state of a pipe combined with a view on the ongoing service conditions provides the information that enables the residual lifetime to be estimated. This type of assessment allows the owners of pipeline assets to optimally plan pipeline maintenance and replacement and avoid unexpected failures.**  
.....

## ADVANCEMENTS IN THE MOLECULAR DESIGN OF PE MATERIALS HAVE IMPROVED THE DURABILITY AND SLOW CRACK GROWTH RESISTANCE OF PE PIPELINES. THE INCORPORATION OF ANTIOXIDANTS INTO THE PIPE MATERIAL PROTECTS PE PIPE FROM OXIDATIVE DEGRADATION.

A study conducted by the Commonwealth Scientific and Industrial Research Organisation (CSIRO) and the American Water Works Association noted that the average failure rate of PE pipes at 3.16 per 100 kilometres was significantly lower than the many other pipe materials:

- Asbestos cement (16)
- Ductile Iron (5.28)
- Iron (20.1)
- PVC (7.32)
- Steel (11.14)

The life expectancy of a PE pipeline system is highly dependent on the prevailing service conditions such as temperature, pressure and exposure to chemical agents. Pipelines may be exposed to conditions beyond the design parameters and this can lead to a variation in the expected lifetime of the pipes. An assessment of the condition and the residual lifetime of a PE pipeline can provide the asset owner with valuable information, potentially preventing costly and unnecessary maintenance or alerting of the risk of a potential failure.

## THE FAILURE MODES OF PE PIPES

### Ductile failure

A PE pipe that is operated beyond its pressure rating may experience ductile failure.

PE pipes are assigned a pressure rating classification that is associated with the material from which the pipe made. The PE100 classification specifies a Minimum Required Strength (MRS) of 10 MPa at 20°C after 50 years. This is the maximum stress at which the pipe can operate without risk of ductile failure.

The Hydrostatic Design Stress (HDS) is the stress at which the pipe has been designed to operate. The HDS will be lower than the MRS as a down-rating occurs to reflect the use of safety factors that account for concerns such as the proximity of the pipe to the urban environment. The HDS is incorporated into the calculations which determine the pipe wall thickness.

A pipe that is in good condition and operating within conditions that are consistent with its service design will not experience a ductile failure.



THE LIFE EXPECTANCY OF A PE PIPELINE SYSTEM IS HIGHLY DEPENDENT ON THE PREVAILING SERVICE CONDITIONS SUCH AS TEMPERATURE, PRESSURE AND EXPOSURE TO CHEMICAL AGENTS.

**Brittle failure**

Environmental factors such as excessive heat, pressure and chemical agents in the medium being conveyed can lead to degradation in the strength of PE pipes. Processes which lead to the oxidation of the polyethylene, can negatively impact the polymer’s structural integrity.

This type of degradation is known as brittle failure. Pipe resin manufacturers actively work to counter this form of failure by incorporating antioxidants into the material. The amount of antioxidant contained within the pipe resin is finite and will eventually be consumed in the presence of oxidising factors. Once the antioxidant has been consumed the polyethylene in the pipeline can start to oxidise leading to a decrease in the overall crack resistance of the pipe. This will eventually lead to the initiation and propagation of cracks within the pipeline.


Pipes made from older generations of PE resin are more likely to undergo brittle failure, as the latest generations have significantly improved slow crack growth resistance properties.

**THE FRAMEWORK OF A RESIDUAL LIFETIME ASSESSMENT**

There is no set amount of time which a PE pipe should last. Engineers design pipe networks to last 50 years or longer and even after 50 years of service, the product may still perform at the level it did at the beginning of its lifetime.

A PE pipe’s expected residual lifetime is heavily dependent on the service conditions. Brittle and ductile failure modes are associated with the pressure, temperature, UV exposure and the presence of oxidative agents.

The residual lifetime assessment requires analysis of the current condition of the pipe material as well as the operating history of the pipe.

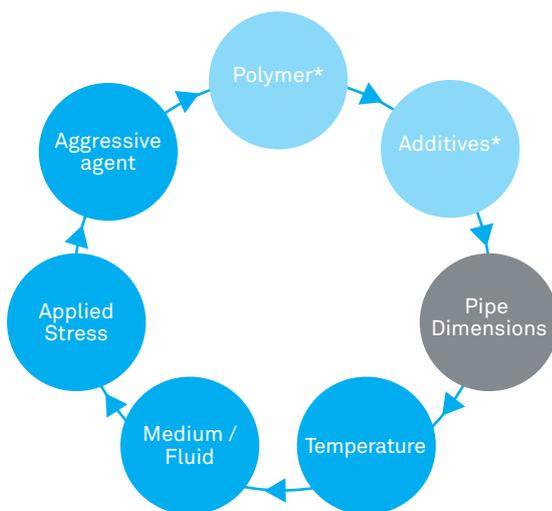

● PE Material ● Pipe Design ● Service Conditions

\*Pipe extrusion can impact these factors

**CONDUCTING THE RESIDUAL LIFETIME ASSESSMENT – PIPE MATERIAL**

The likelihood of brittle failure is the important consideration in the residual lifetime assessment of an existing pipeline.

The first step in the residual lifetime assessment is to verify that the pipe resin was manufactured in compliance with AS/NZS 4131. This standard specifies the physical properties that the PE resin must achieve in order to be suitable for pressure pipe applications.

While AS/NZS 4131 applies to the polyethylene resin performance, AS/NZS 4130 dictates requirements for the pipe’s physical characteristics. This standard ensures that a particular pipe is designed to be capable of withstanding pressures inherent in the service conditions.

A certified PE testing laboratory such as the Qenos Technical Centre will carry out several tests to enable it to estimate the residual service life expectancy of an installed PE pipe:

- Oxidative induction time (OIT) is a measure of a compound’s thermal stability, and indicates the level of antioxidant remaining in the pipe. The remaining antioxidant is able to protect the pipe resin from oxidative degradation.
- Fourier Transform Infrared Spectroscopy (FTIR) is an analytic technique used to quantify the amount of oxidative degradation that has already occurred in the pipe.
- Melt flow rate (MFR) is a technique that links the viscosity of melted polymers to their physical size. This measure informs the laboratory on the toughness of the material.

**CONDUCTING THE RESIDUAL LIFETIME ASSESSMENT – OPERATING HISTORY**

Miner’s rule is one of the most widely used cumulative damage models for failures caused by fatigue. It states that if there are k different stress levels and the average number of cycles to failure at the ith stress, Si, is Ni, then the damage fraction, C, is:

$$\sum_{i=1}^k \frac{n_i}{N_i} = C$$

where:

ni is the number of cycles accumulated at stress Si.

C is the fraction of life consumed by exposure to the cycles at the different stress levels.

In general failure occurs when the damage fraction reaches 1.

The above equation can be thought of as assessing the proportion of life consumed at each stress level and then adding the proportions for all the levels together.

ISO 13760:1998 describes the method using Miner’s rule for the calculation of cumulative damage for plastic pipes used for the conveyance of fluids under pressure. This approach is used by the material testing laboratory to calculate a PE pipe’s expected residual lifetime.

In assessing the residual lifetime the laboratory will need access to the reports describing the original service conditions of the pipe. Miner’s rule can then be applied to account for the cumulative impact of changes in parameters such as operational temperature, pressure and disparate environmental factors and to calculate the impact that these parameters will have on the residual lifetime.

## ACCESSING PROFESSIONAL KNOWLEDGE

The science of the molecular architecture of polyethylene and the factors that induce degradation is complex. Experience in interpreting analytical tests such as OIT, FTIR and MFR is critical in assessing the residual lifetime of a pipe.

The Qenos Technical Centre in Melbourne has an extensive suite of state of the art analytical and physical testing instrumentation complemented by commercial and semi-commercial polymer processing equipment and NATA accreditation for a range of specialised polyethylene tests.

Qenos has amassed years of experience in producing polyethylene for pressure pipe applications and brings a strong advisory presence to the pipeline industry including in the assessment of residual service life of PE pipe.



# Qenos | Ingenious Transformations

## Disclaimer

All information contained in this publication and any further information, advice, recommendation or assistance given by Qenos either orally or in writing in relation to the contents of this publication is given in good faith and is believed by Qenos to be as accurate and up-to-date as possible.

The information is offered solely for your information and is not all-inclusive. The user should conduct its own investigations and satisfy itself as to whether the information is relevant to the user's requirements. The user should not rely upon the information in any way. The information shall not be construed as representations of any outcome. Qenos expressly disclaims liability for any loss, damage, or injury (including any loss arising out of negligence) directly or indirectly suffered or incurred as a result of or related to anyone using or relying on any of the information, except to the extent Qenos is unable to exclude such liability under any relevant legislation.

## Qenos Pty Ltd

471 Kororoit Creek Rd  
Altona Victoria 3018 Australia  
Phone 1800 063 573  
ABN 62 054 196 771

–  
[qenos.com](http://qenos.com)

Qenos and the Qenos brandmark are trade marks of Qenos Pty Ltd